



# Lenovo Yoga 2 11" Screen Replacement

This guide will show you how to safely remove and replace a broken screen.

Written By: Peyton Leeson



## INTRODUCTION

To replace the screen you need to make sure that the hinges are up before you pry off the screen. If not, this will result in a broken screen and will be difficult to replace.

---




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen




 Make sure to unplug the device and disconnect the battery to avoid injury.

- Locate the small rubber rectangles on either side of the computer, under the screen.
- Underneath each of these rectangles is a 3mm screw. Using a Philips 00 screwdriver, take out these screws.

## Step 2



 Flip keyboard under the screen for ease of repair.

- Using a plastic opening tool, carefully remove the small plastic piece at the bottom of the screen.

## Step 3



- Using a Philips 00 Screwdriver, remove the nine screws of varying sizes that connect the screen to the rest of the computer (four near each of the hinges, one in the center)






## Step 4



- ⚠ Use caution when removing the screen from its back, as the screen is pretty fragile.
- ⓘ Open the computer and move the hinges up, then move the screen down. Hinges have to be up before you try to remove the screen.
- Hold the back side of the display panel firmly in place, and slide the screen up to unlock plastic tabs on the two halves of the display.
- ⓘ Note the open end of the hole where the screws are removed.
- ⚠ On some models, if you try to pry the two halves apart instead of sliding, it will break most of the tabs and the screen will not hold together when reassembled.

## Step 5

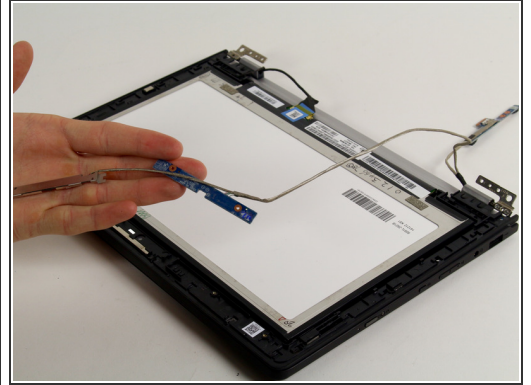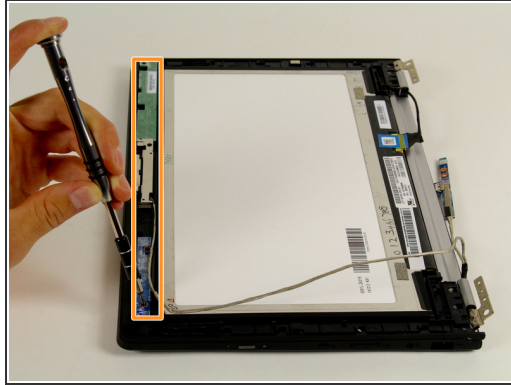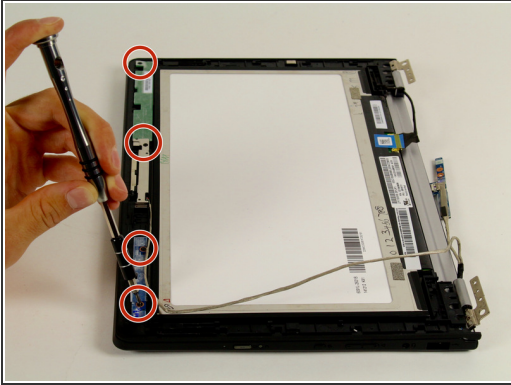

- Using a Philips 00 Screwdriver, remove the four screws of varying sizes that connect the screen to other components of the computer.
- Once the screws have been removed, take out the components of the computer that are connected with wires.

## Step 6



- Once the screen is completely free from the rest of the computer, you are able to remove and replace it.

To reassemble your device, follow these instructions in reverse order.